
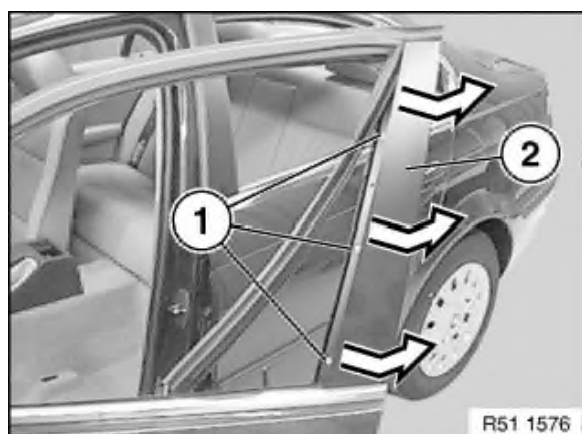


For removal and installation only, not for adjustment:

Remove cover (anti-trap protection) on door window frame.

Open door window.

Partially detach rubber window seal (1) at rear.

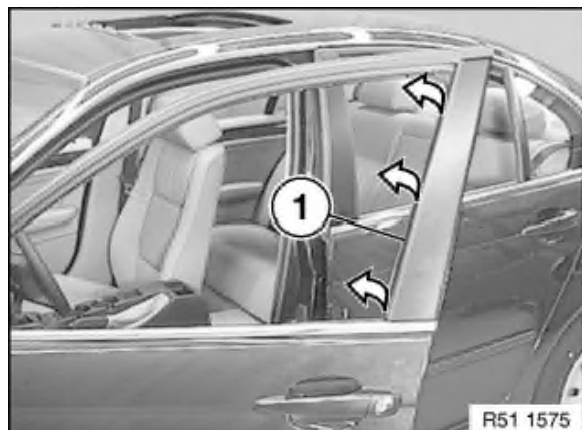


Loosen screws (1).

Remove finisher (2) and press approx. 3 mm towards rear.




Remove trim (1) towards top.

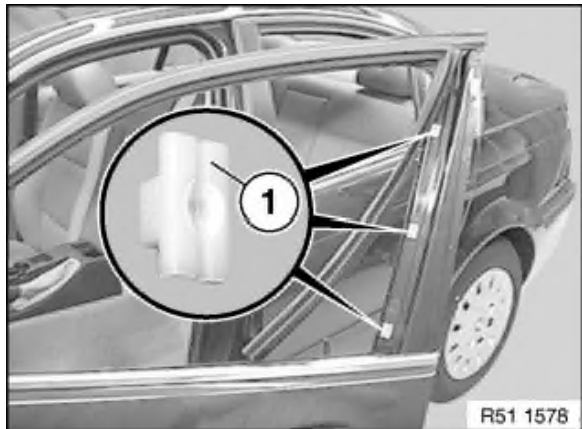


Installation:

If necessary, replace faulty plastic nuts (1).

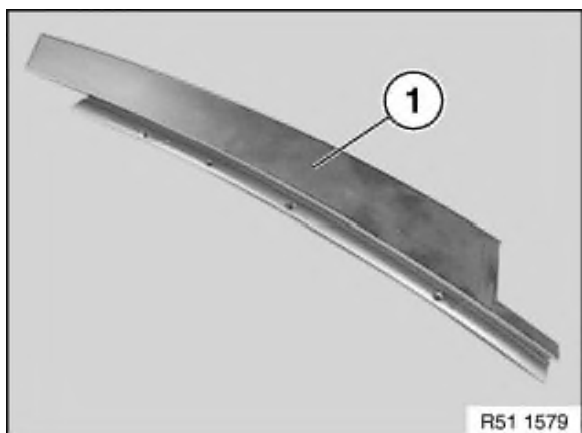

Installation:

Check finisher (1) for damage, replace if necessary.

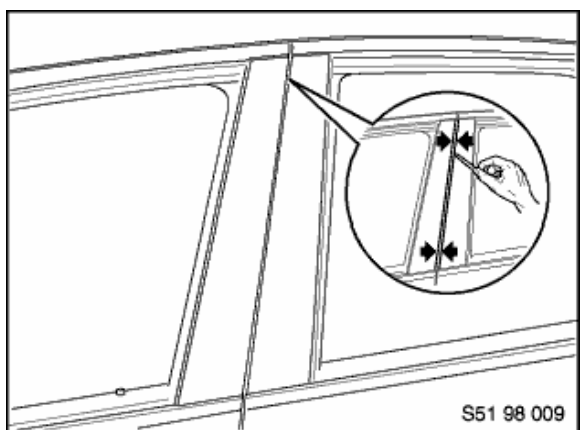

Installation:


To prevent wind noises.

Check gap with a 0.05 mm feeler gauge.

Slide feeler gauge between B-pillar finishers of front and rear doors.

When the finishers are correctly adjusted, it must be possible to feel a slight suction resistance over the entire length of the finisher.

If the gap is too big, this may result in wind noises.

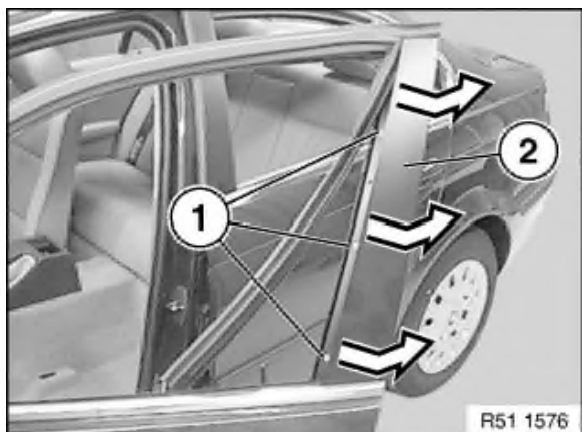

Installation:

If necessary, release screws (1).

Press finisher (2) towards rear and tighten down screws (1).

If gap is still too big,
adjust finisher on window frame of rear door.